

USER MANUAL FOR WINE COOLER

**Model number
DAUF-39.119DOP.TO**

Dear customer,

Thank you for buying this appliance and putting your trust in Dunavox. We have designed this product with the greatest care and hope it will be proud and long-term addition to your house. If you have any questions about your appliance, please let us know; we are happy to help you!

1. ABOUT THIS DOCUMENT

This manual is applicable to all Horizon and Spirit models from Dunavox. Read and understand this manual before using the product. Carefully store this manual for future reference.

We reserve the right to change the parameters without prior notice.

This manual is originally written in English. All other languages are translations of the original manual.

2. CONFORMITY

LV 2014/35/EU

EMC 2014/30/EU

ERP 2009/125/EC

RoHS 2011/65/EU and (EU) 2015/863

CB

3. SAFETY

Intended use:

This appliance is intended for storing wines at their optimal temperature. This appliance is intended to be built in.

The appliance is intended for use in household environments for typical housekeeping functions that may also be used by non-expert users for typical housekeeping functions, such as: shops, offices other similar working environments, farmhouses, by clients in hotels, motels, and other residential type environments and/or in bed and breakfast type environments.

The appliance is for indoor use only.

This appliance is intended to be used for the storage of wine.

Intended users:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be done by children without supervision.

DISPOSAL OF OLD APPLIANCES

Before disposing of an old appliance remove any plugs and power leads to ensure that the appliance is inoperative.

Remove the door but leave the shelves in place to prevent children climbing inside.



This symbol on the product indicates that it must not be discarded as general household waste. Instead, it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

By disposing of this product correctly you will help prevent potential negative consequences for the environment and human health, which would otherwise be caused by inappropriate waste handling of this product.

Warning: When disposing of an old appliance make sure that the pipe work does not become damaged.

BEFORE INSTALLING AND USING YOUR NEW APPLIANCE

Warning: Before powering up the appliance, please open the door for 5 minutes to ventilate the cabinet. Read through the instructions supplied with the appliance – failure to install or use this appliance in accordance with the instruction book may invalidate any warranty.

The manufacturer does not accept any liability for damage caused through improper use, or incorrect installation. Do not install this appliance if it has been damaged during transportation. This includes the plug and supply cord. Please keep these instructions in a safe place for future reference.

Note: This appliance is intended to be used exclusively for the storage of wine.

IMPORTANT SAFETY INSTRUCTIONS

- To prevent damage to the door and door gasket, make sure the door is fully opened before pulling out any shelves.
- Do not move the wine cooler when it is loaded with wine, you might distort the appliance.
- If the power lead becomes damaged it should only be replaced by the manufacturer or a suitably qualified person.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids.
- Do not store or use gasoline or any other flammable vapours and liquids in the vicinity of this or any other appliance. This can create a fire hazard or explosion.
- **Warning:** Do not allow the refrigerant circuit to become damaged while using or installing the appliance. Should it become damaged, do not use the appliance until you are instructed to do so by a service engineer. Refrigerant can ignite or cause damage to the eye when leaking.
- Always remember to unplug the appliance before cleaning. When disconnecting from the electricity supply, pull the plug, not the power cord.
- Do not use anything electrical inside the Wine Cabinet.
- All electrical repairs must be carried out by a qualified service engineer. Inadequate repairs may result in a major source of danger for the user and invalidate any warranty.
- Never store anything dangerous inside the appliance, such as combustibles, explosives, strong acid or alkali etc.
- Always keep any ventilation openings clear of obstruction. Should they become blocked, clear them straight away.
- Make sure that the plug is in an accessible place when installation is complete.
- Only use this appliance for domestic purposes in accordance with these instructions.
- The wine cooler is suitable for storing wine (or other bottled beverages). It is not suitable for storing fresh or frozen foods.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- If the refrigerant of these appliances is R600a, Flammable and explosive articles should not be put in or near the cabinet, to avoid the fire or explode caused.



INSTALLATION OF YOUR WINE CABINET

- Remove the exterior and interior packing.
- **Note:** Before connecting the Wine Cabinet to the power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Place your Wine Cabinet on a floor that is strong enough to support it when it is fully loaded. To level your Wine Cabinet, adjust the front levelling foot at the bottom of the Wine Cabinet.
- Locate the Wine Cabinet away from direct sunlight and sources of heat (oven, stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- The Wine Cabinet should be positioned where the ambient temperature is between 10°C and 30°C. If the ambient temperature is above or below this range, the performance of the unit may be affected. Placing the appliance in extreme cold or hot conditions may cause the interior temperatures to fluctuate. The range of setting temperatures may not be reached.
- Plug the Wine Cabinet into an appropriate socket. Should the plug require changing, use the instructions as given in the Electrical Requirements section.
- Switch off the fuse of the power outlet before connecting the appliance to the mains.
- Connect the appliance to an earthed socket.
- Switch off the fuse of the power outlet before performing maintenance.
- Do not connect the appliance to a power outlet when the power cord is damaged.
- Do not connect the appliance to a faulty power outlet.
- Keep the appliance and the power cord away from water or moisture.


Note: The ventilation cannot work properly when the ventilation grid is covered. The appliance can overheat.
Do not cover the ventilation grid.

Note: Storing opened bottles in the appliance can cause leakage and mold in the wine cooler. Do not store bottles that have been opened.

Note: Always fix the appliance to the cabinet.

OPERATING YOUR WINE COOLER

➤ The controls of your wine Cooler

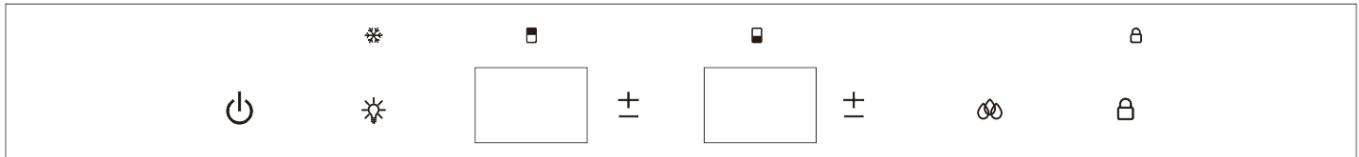

1. Power ON/OFF button

Press this button to turn on the appliance. Press and hold this button for 3 seconds. The left display shows a countdown from 3 to 1, then the appliance turns off.

2. indicator light

Displays compressor in operation.

3. Light Function Button

There are three light mode types (L1/ L2/L3). The default setting is L1 mode.

L1: Door open: light on. Door closed: light off.

L2: The light will stay constantly illuminated whether the door is opened or closed. Door opened with 100% light brightness. Door closed with 75% light brightness.

L3: Door opened: light on. Door closed: light will turn off automatically after 10 minutes.

4. Window

It displays temperature of the upper compartment and code .

5. Button

To set the temperature of the upper compartment.

6. Window

It displays temperature of the lower compartment and code .

7. Button

To set the temperature of the lower compartment.

8. button

Press this button to change the inner light color .

(The default setting is white light. Each press alternates the light colour between White - Blue - Orange. The button background colour also changes at the same time.)

9. Child Lock button

The default setting is unlocked. Press and hold this button for 3 seconds to lock or unlock the appliance. The indicator lamp is on when in locked condition.

10. indicator light

The indicator lamp is on when the appliance is in locked condition.

- This appliance memorizes and saves its set temperature. In case of a power outage, the unit adjusts to its previous temperature setting when power resumes.
- When pressing “ ” button, the system will enter the set up mode in the upper or lower compartment automatically. The LED will flash and display the setting temperature.

Each press on the key, the temperature setting of the upper zone will decrease by 1°C. When the temperature setting reaches the lower limit of -5°C, the temperature will return to 10°C.

Each press on the key, the temperature setting of the lower zone will decrease by 1°C.

When the temperature setting reaches the lower limit 10°C, the temperature will return to 18°C.

Press once the button, the temperature will decrease 1°C. After stopping pressing the button for 5 seconds, LED figure will stop flash, then exit setting model.

- To view the “actual” temperature. (anytime) press and hold the corresponding button( )for approximately 3 seconds, the “actual” temperature will temporarily “flash” in the LED display for 5 seconds.
- To switch the display between the Fahrenheit(°F) and Celsius (°C) scale depress the“  ”and“  ”control buttons simultaneously for approximately five(5)seconds.

Upper compartment: The temperature setting can be adjusted from 5-10°C.

Lower compartment: The temperature setting can be adjusted from 10-18°C.

The upper compartment temperature preset at the factory is 6°C.

The Lower compartment temperature preset at the factory is 12°C.

➤ Storage diagram


According to the actual configuration of your product, please check the relative Storage diagram.

Bottle loading proposal#1

Total: 35 bottles (Bordeaux)

Bottle loading proposal#1

Full shelf(4)

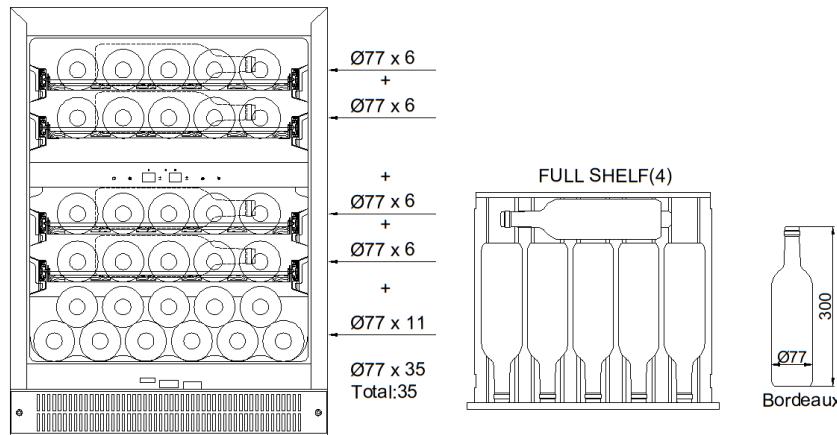


Bottle loading proposal#2

Total: 35 bottles (Bordeaux 15 bottles and Burgundy 20 bottles)

Bottle loading proposal#2

The shelf design same as proposal#1

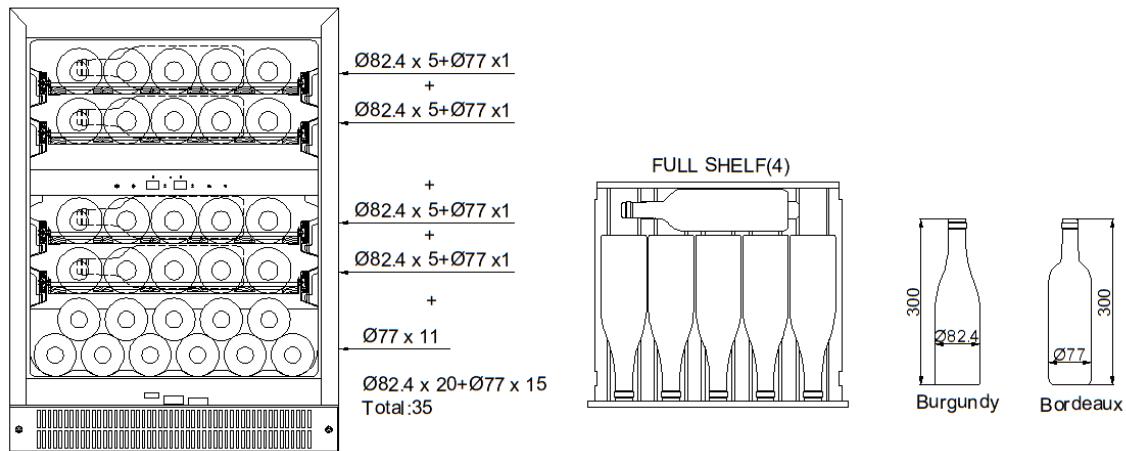

➤ **Shelves**

- According to the actual configuration of your product, please check the relative Remove or Replace Racks.
- To prevent damaging the door gasket, make sure to have the door all the way opened when pulling shelves out of the rail compartment.

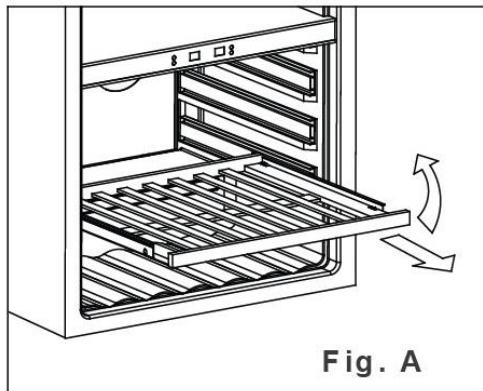


Fig. A







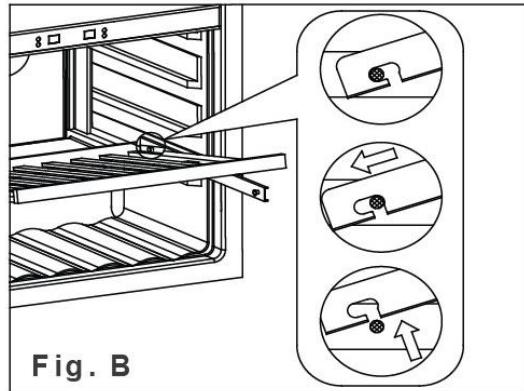


Fig. B

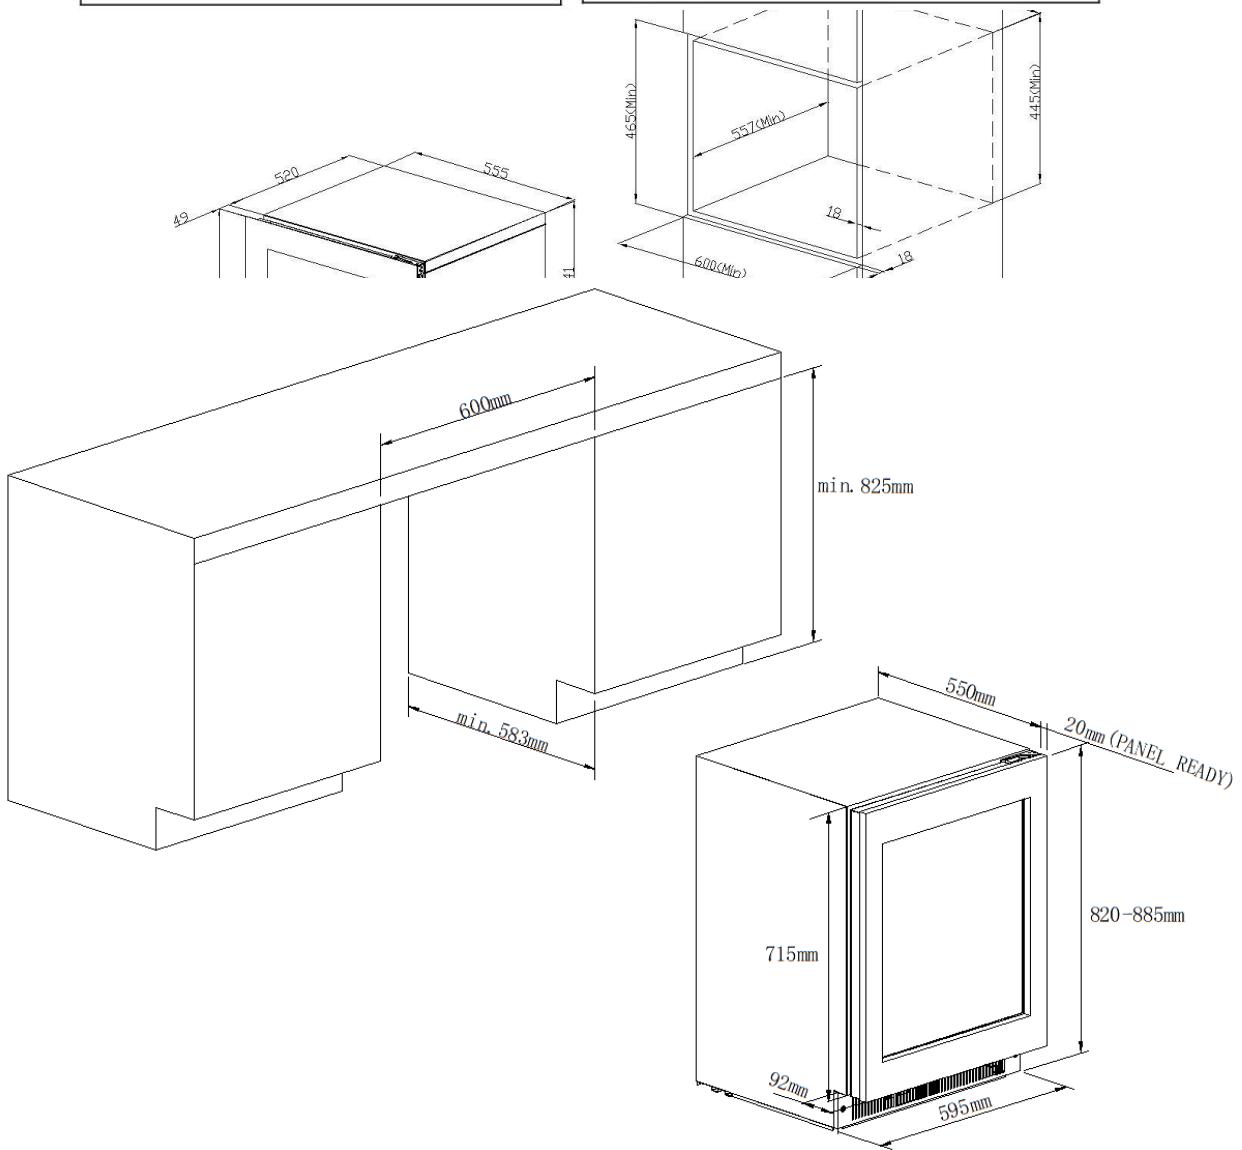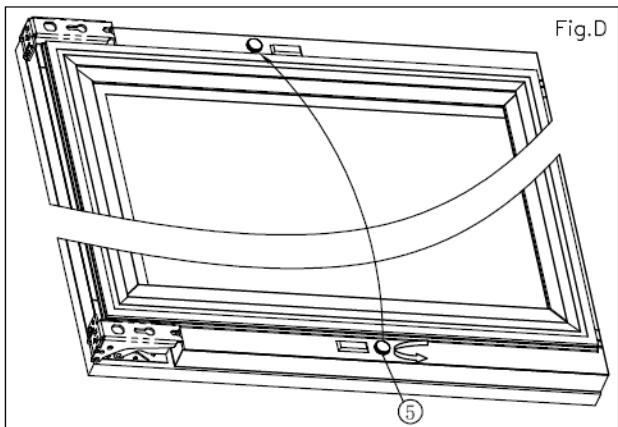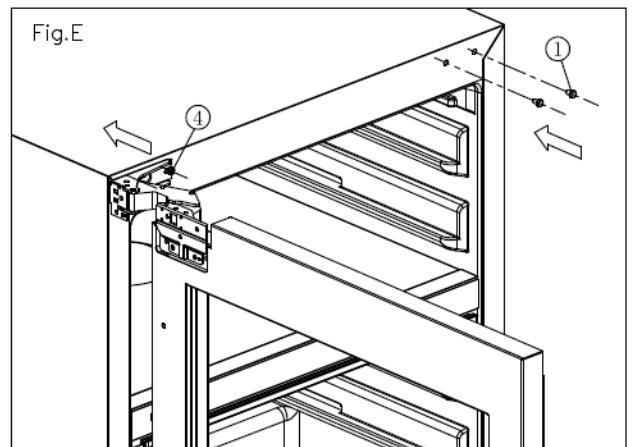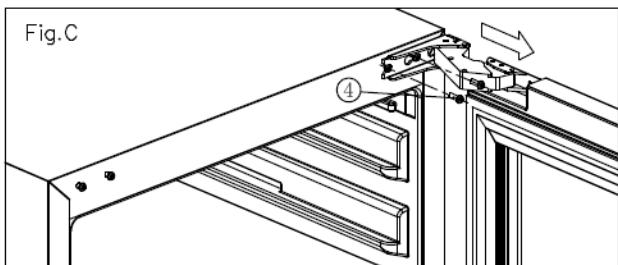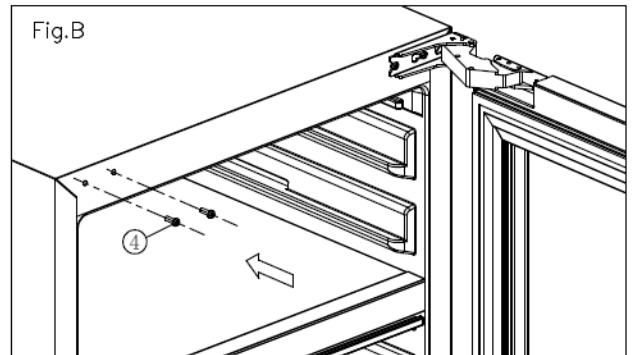


➤ **How to change the door opening Angle**

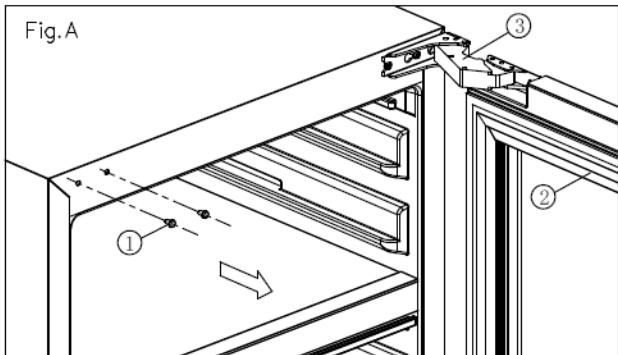

1.decorative nail 2.door 3.hinge 4.screw 5.knob

1. As per Fig A,please open the door at 90 degree, release the decorative nail on left side,
2. As per Fig B,please fix the screws, but please don't fasten the screws,
3. As per Fig C,please release all the screws for upper hinge and lower hinge,
4. As per Fig D,rotate the knob to the left, remove it and install it in the upper door frame,
5. As per Fig E,please rotate the door at 180 degrees, put the upper/lower hinge into Fig B screws, then fix the screws. And fix the decorative nail on right side.

➤ **INSTALLING THE TOP FIXING BRACKET**

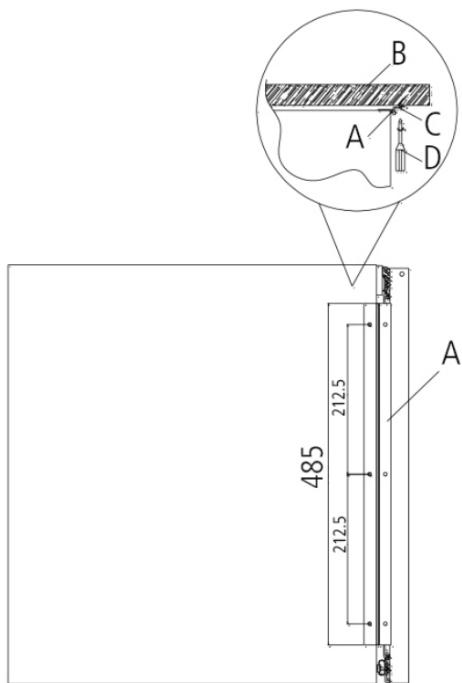

This bracket will keep the product secure and help prevent it moving when in use.

After installing the wine cabinet, please open the door, adjust the fixing bracket and fix this into the work surface with three screws using a screwdriver.

A. Top Fixing Bracket

B. Work Surface

C. Screw

D. Screwdriver

➤ **INSTALLING THE SIDE FIXING BRACKET**

This bracket will keep the product secure and help prevent it moving when in use.

1. Screw 2. Fixing bracket 3. Kitchen cabinet

As per Fig A, line the fixing bracket (2) with the two holes at the top of the wine cabinet. Use the screws (1) to secure into position.

As per Fig B, use the screws (1) to secure the bracket to the side of the kitchen cabinet (3).

Fig A


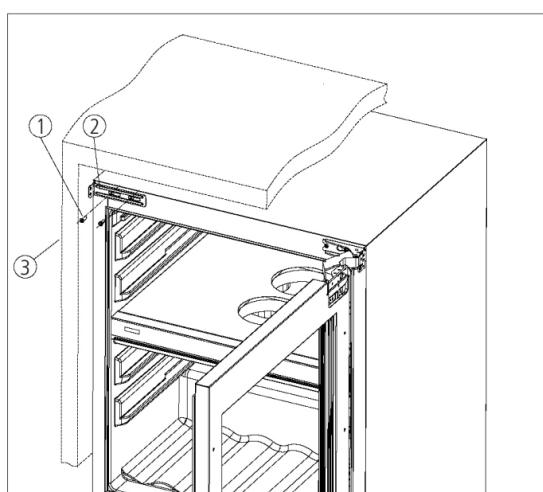


Fig B

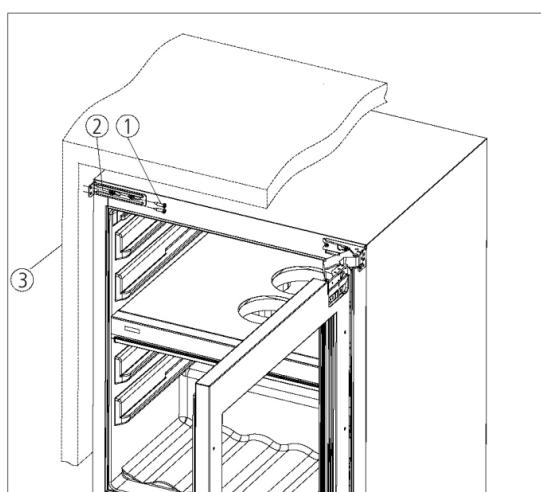

➤ INSTALLING THE FURNITURE DOOR

You will need to install a furniture door frame to the front of the wine cabinet once wine cabinet has been installed.


The furniture door frame can be custom made to line up with your other furniture doors in the kitchen. The door must be finished on both sides in order to prevent warping. In some installations the door panel may be visible through the glass when the door is open. See below for wine cabinet door dimensions, and also an example of a furniture door size.

NOTE:


The door panel must not weight more than 10kg.

NOTE:

We recommend the door thickness does not exceed 18mm. If a thicker door is used, the door may make contact with the adjacent furniture door when opened.

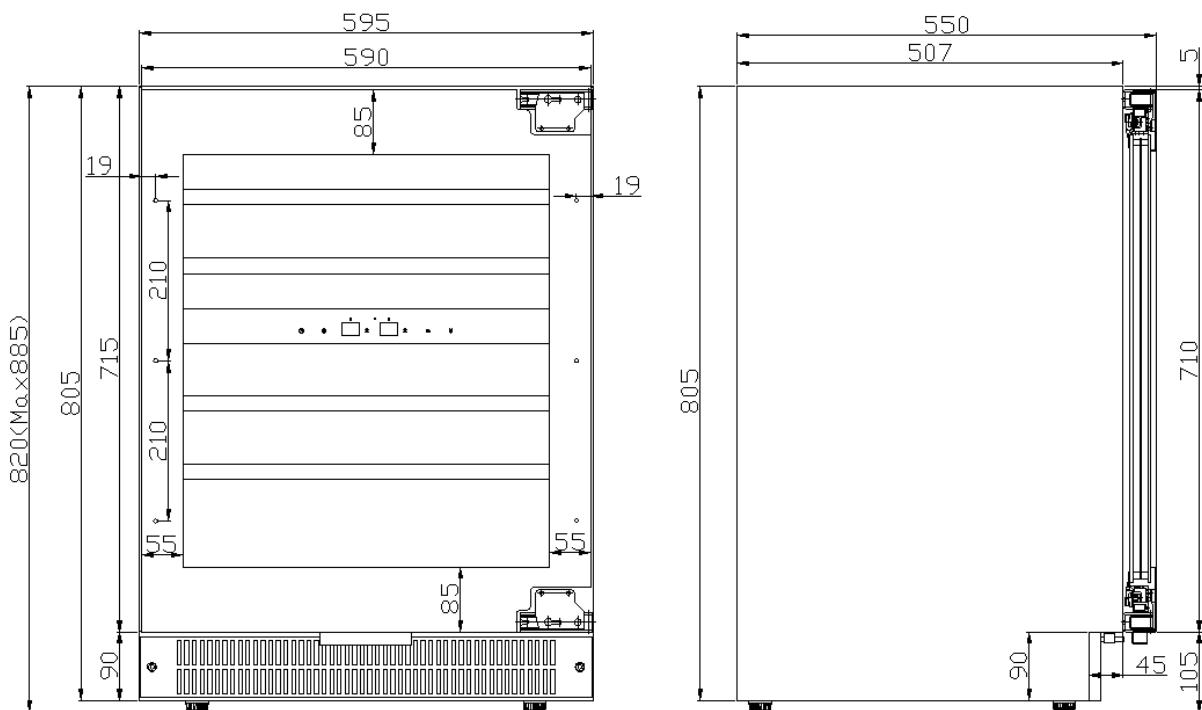

➤ EXAMPLE INFRAME STYLE DOOR

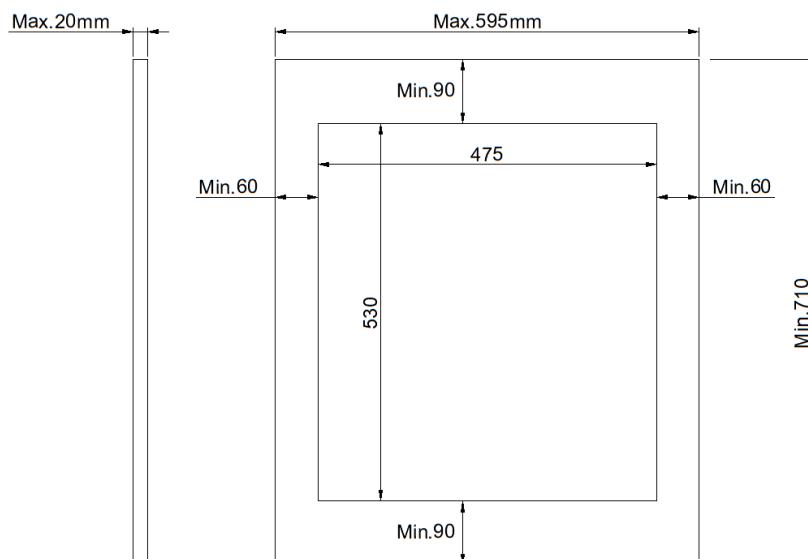

The height of the furniture door will need to be adjusted to ensure it lines up with the other kitchen cabinet doors, therefore these dimensions will vary.

The minimum overall height of the furniture door must be at least 710mm.

NOTE:

The furniture door can extend beyond the appliance door, however you must ensure a gap of at least 75mm is left between the bottom of the furniture door and the floor to allow for sufficient ventilation.

➤ **HOW TO INSTALL THE FURNITURE DOOR**

NOTE:

If a handle is required, please ensure this is installed in an appropriate position before the furniture door is installed.

1. Fully open door.

2. Starting at the corner, pull the gasket away from the door. As per Fig A.

3. Continue to pull the gasket free from the gasket channel.

4. Upon removal, lay gasket down on a flat surface.

5. Secure the furniture door panel to the appliance door using clamps (see Fig. B).

6. Using a 3 mm drill bit, drill 6 pilot holes into the wood panel 12 mm deep using the holes in the door frame as a guide.

NOTE:

It is important to ensure that all drilled holes are drilled to the correct depth in order to avoid splits in the wood when hardwood is installed. You must also take care not to drill all the way through the door.

7. Locate 6 of the ST4*35 mm screws provided with your unit.

8. Using a Phillips screwdriver, place one screw into each of the 6 pilot holes and screw into the door, as per Fig C. Be careful not to over tighten screws. Ensure the screws sit flush against the bottom of the channel. Remove clamps from door. Note: If panel requires additional adjustment after removing clamps, slightly loosen each screw and adjust panel as necessary. Tighten screws upon completion.

9. Starting at the corners, re-install the gasket into the gasket channel in the frame, by pushing firmly into place. Make sure the gasket is fully seated into the channel.

NOTE:

If the gasket is not fully seated into the channel, the door will not close properly. This can prevent the door switch from activating and will stop the wine cabinet from cooling.

Fig.A

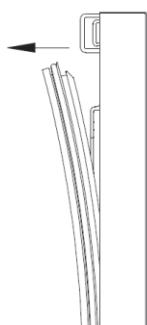


Fig.B



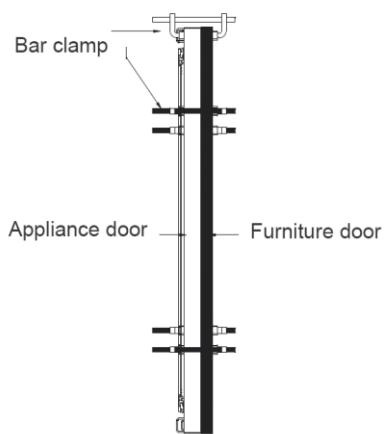


Fig.C

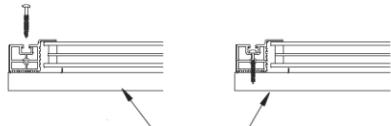

USING THE FOOT SLIDERS

If you want to adjust the height over 820mm, please install the product using the foot sliders provided. These are provided to help prevent the feet catching on the floor when sliding the appliance into the aperture. Place the back foot in the location marked 'Back' below and the front foot in the location marked 'Front'. Once fitted to both sides of the wine cabinet the appliance can be gently positioned into the aperture, taking care not to place excess pressure on the feet when locating the cabinet.

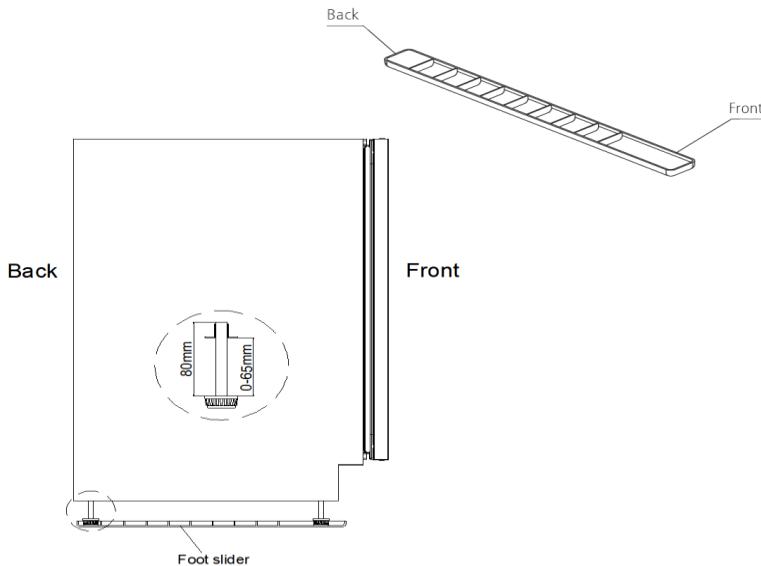

➤ Automatic door opening function


After the door is closed, press 2-3 seconds on the lower left of the door or lower right of the door, after which the push rod starts and sticks out, and the door opens automatically, and then the push rod automatically retracts. After two seconds, the door can be closed manually.

➤ How to adjust the push door

The automatic door opening function works by pressing the switch in front of the cabinet through the knob on the door to trigger the opening action. The door clearance may change due to vibration and other factors in transit, it causes the automatic door opening function is insensitive or cannot be used normally. Please check the distance between the knob and the switch in the door closed state and adjust to the most appropriate distance by rotating the knob.

1. The door is opening automatically after power on, it indicates the distance between the knob and the switch is too close.
2. There is no response even press the door hard, it indicates the distance between the knob and the switch is too far.
3. The door is opening automatically even by gently touch, it indicates the distance between the knob and the switch is too close.

Please adjust the knob on the basis of the 1/4 circle in the above cases: rotate to the left, the knob is extended out of the door frame; rotated to the right, the knob is retracted into the door frame.

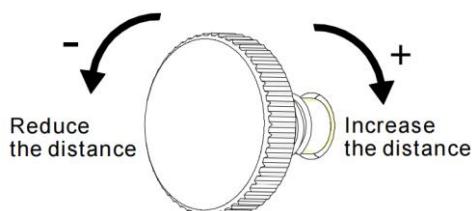

Adjusting knob

CARE & MAINTENANCE

➤ **Clean your Wine Cooler/Beverage Cooler**

- Turn off the power, unplug the appliance, and remove all items including shelves and rack.
- Wash the inside surfaces with a warm water and mild solution.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.
- Defrost the unit every 6 months

Defrosting process

To defrost the appliance:

- 1, Switch off the appliance
- 2, Remove the bottles from the appliance
- 3, Leave the door open to speed up the process
- 4, Place towels at the door opening of the appliance to absorb any water.

Defrosting usually takes 2-4 hours. The appliance is defrosted when all the frost from the evaporator is gone.

- 5, Switch the appliance back on
- 6, If present, refill the humidity box

➤ **Power failure**

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a long period of time, you need to take the proper steps to protect your contents.

➤ **Vacation Time**

- Short vacations: Leave the Wine Cooler/Beverage Cooler operating during vacations of less than three weeks.
- If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

➤ **Moving your Wine Cooler/Beverage Cooler:**

- Remove all items.
- Take out the loose items inside the wine cooler/Beverage Cooler (such as shelf), or fix the loose items with the foam.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect outside of appliance with a blanket or similar items.

➤ **Energy saving tips**

- The Wine Cooler/Beverage Cooler should be located in the coolest area of the room, away from producing appliances, and out of the direct sunlight.

PROBLEMS WITH YOUR WINE COOLER/BEVERAGE COOLER

You can solve many common Wine Cooler/Beverage Cooler problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you solve the problem before calling the service.

Troubleshooting Guide

Problem	Possible Cause
Wine Cooler/Beverage Cooler does not operate	No plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
Wine Cooler/Beverage Cooler is not cold enough	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.
Turns on and off frequently	The room temperature is hotter than normal. Overload of the cabinet The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work	Not plugged in. The circuit breaker tripped or a blown fuse. The bulb has burned out. The light button is "OFF"
Vibrations	check to sure that the Wine Cooler/Beverage Cooler is level.
Too much noise	The rattling noise may come form the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling. Contraction and expansion of the inside walls may cause popping and crackling noises. The Wine Cooler/Beverage Cooler is not level.
The door will not close properly	The Wine Cooler/Beverage Cooler is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.

WARRANTY

This product comes with a warranty period of 3 years. You can extend the warranty of your compressor up to 5 years if you register your appliance via the following link:
dunavox.com/product-registration

The warranty does not cover:

- Damage in transit or when moving the appliance.
- Any damages caused from negligence, accident, improper use, improper installation/service or use for purposes other than those described in the instruction manual.
- Damage caused by connecting your product to the wrong power source.
- Damage from power failure.
- Faulty installation or modification made during installation.
- Damage caused by unauthorized repair.
- Any damages resulting from force majeure, fire disaster or natural disaster.
- Alterations to the product without express permission from the manufacturer.
- Parts such as light, removable shelves, or plastic.
- Any spoilage or damage to wines or any other contents incidental or consequential to possible defects of the unit.

The warranty clauses and specifications are subject to change without notice.